

WINTER CAR SHELTERS



Information contained in this pamphlet outlines the main standards that must be met when installing a temporary snow shelter. Note that other standards also apply.

INSTALLATION PERIOD

Winter car shelters are allowed from November 1st of one year until May 1st of the following year.


SITING

The following setbacks must be respected:

- 2 metres (6'6") from the outer edge of the sidewalk (diagrams A and B)
- 2 metres (6'6") from the edge of the street (diagram C)
- 2 metres (6'6") from the ditch (diagram D)
- 2 metres (6'6") from a fire hydrant
- 1 metre (3'3") from the side boundary

A snow shelter can only be installed on a driveway.

A snow shelter must never interfere with road visibility.

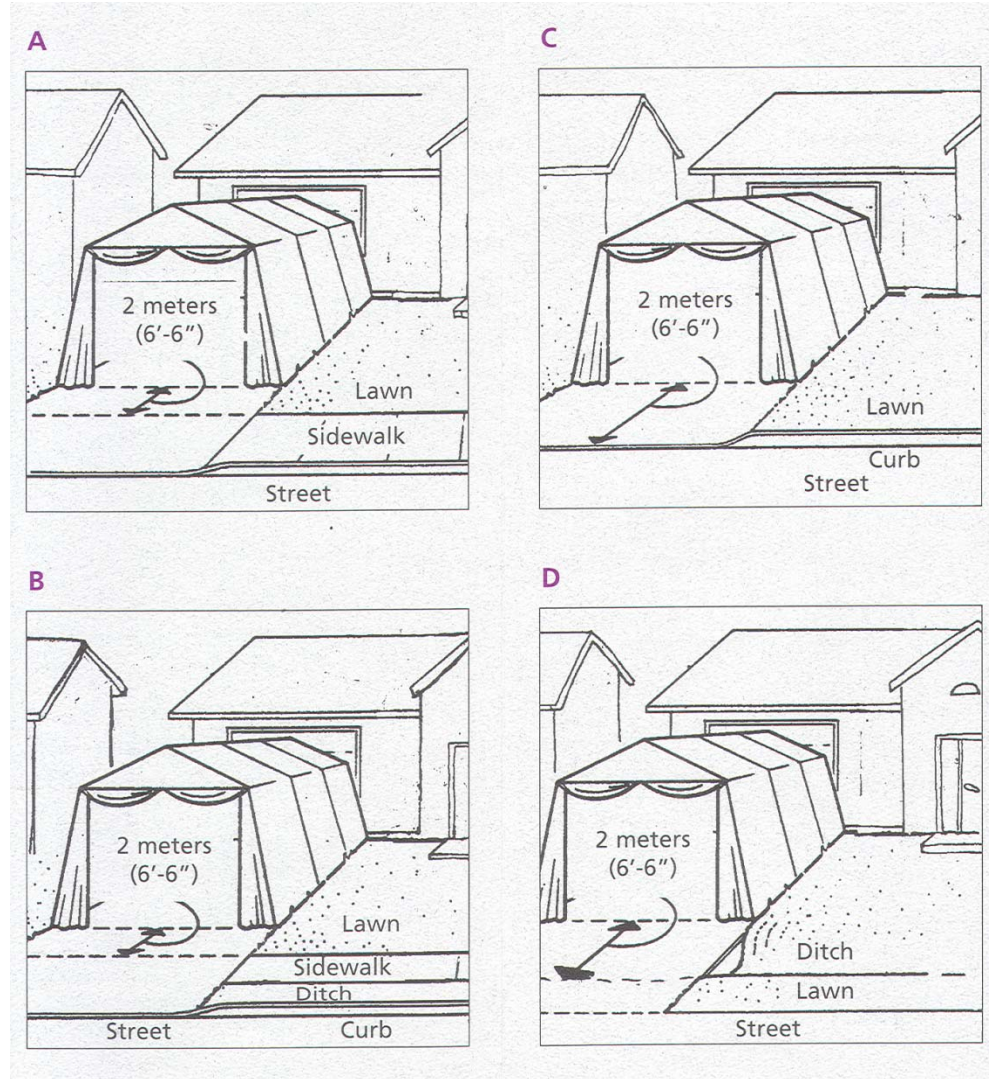

DIMENSIONS

- Maximum height:
3 metres (10 ft.)
- Maximum surface area:
50 sq. metres (540 sq. ft.)

MATERIALS

Winter car shelters must consist of a tubular structure covered by a weatherproof canvas or a woven and laminated polyethylene fabric.

FOR ADDITIONAL INFORMATION

www.ville.rosemere.qc.ca

Write us:

info@ville.rosemere.qc.ca

Fax: 450 621-7601

Urban Planning, Permits and Inspection
Department
Town of Rosemère
100 Charbonneau Street
Rosemère, QC J7A 3W1