

# WINTER CAR SHELTERS

Information contained in this pamphlet outlines the main standards that must be met when installing a temporary snow shelter. Note that other standards also apply.

## INSTALLATION PERIOD

Winter car shelters are allowed from November 1<sup>st</sup> of one year until April 1<sup>st</sup> of the following year.


## SITING

The following setbacks must be respected:

- 2 metres (6'6") from the outer edge of the sidewalk (diagrams A and B)
- 2 metres (6'6") from the edge of the street (diagram C)
- 2 metres (6'6") from the ditch (diagram D)
- 2 metres (6'6") from a fire hydrant
- 1 metre (3'3") from the side boundary

A snow shelter can only be installed on a driveway.

A snow shelter must never interfere with road visibility.

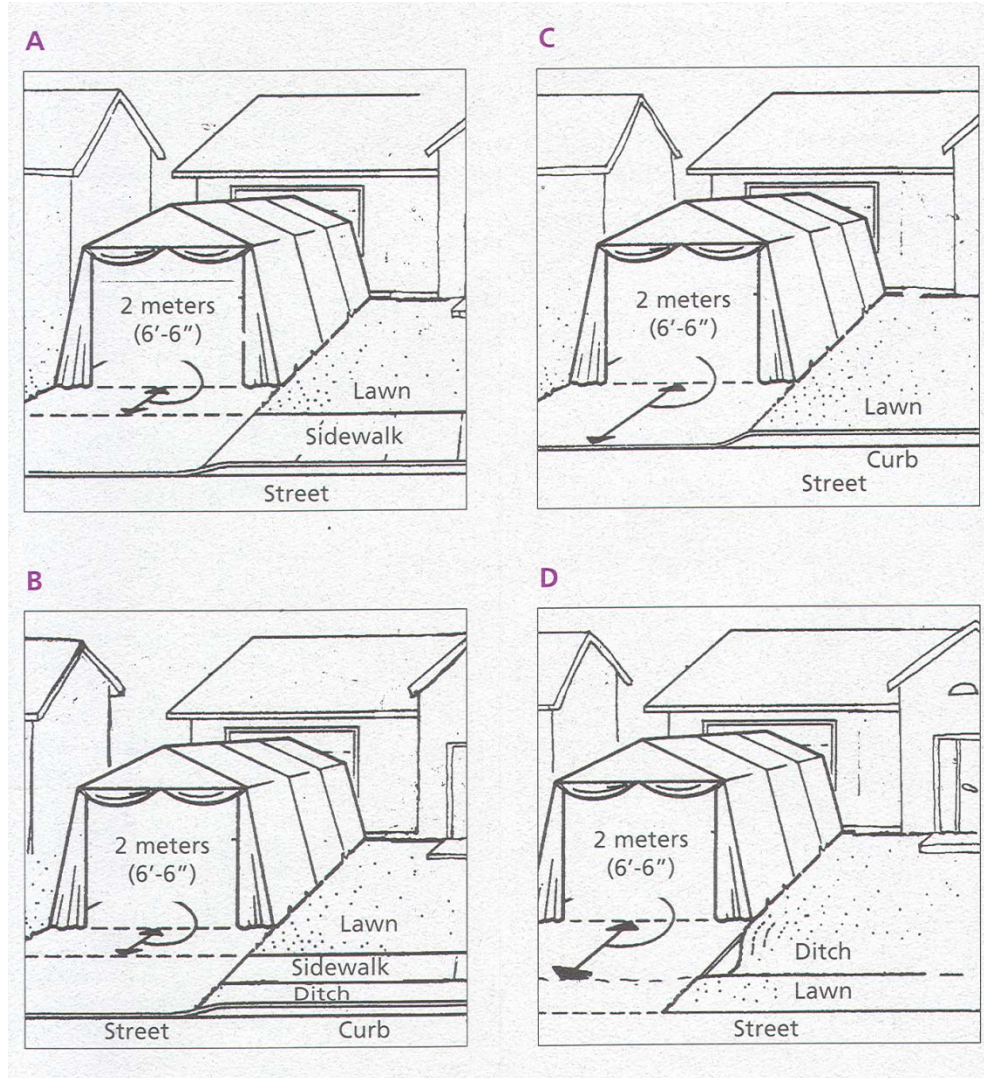

## DIMENSIONS

- Maximum height:  
3 metres (10 ft.)
- Maximum surface area:  
50 sq. metres (540 sq. ft.)

## MATERIALS

Winter car shelters must consist of a tubular structure covered by a weatherproof canvas or a woven and laminated polyethylene fabric.

## FOR ADDITIONAL INFORMATION

[www.ville.rosemere.qc.ca](http://www.ville.rosemere.qc.ca)

*Write us:*

[info@ville.rosemere.qc.ca](mailto:info@ville.rosemere.qc.ca)

Fax: 450 621-7601

Urban Planning, Permits and Inspection  
Department  
Town of Rosemère  
100 Charbonneau Street  
Rosemère, QC J7A 3W1

